

How to connect BMS with batteries

Below pictures for you reference.

Pic1: common port connecting diagram

Pic2: separate port connecting diagram

